


HIGH SPEED - INSTALLATION INSTRUCTIONS FOR LANE-FLEX™ REBOUNDBLE LANE DIVIDER POSTS



To maximize performance of Lane-Flex Post, Post must be installed as instructed below:

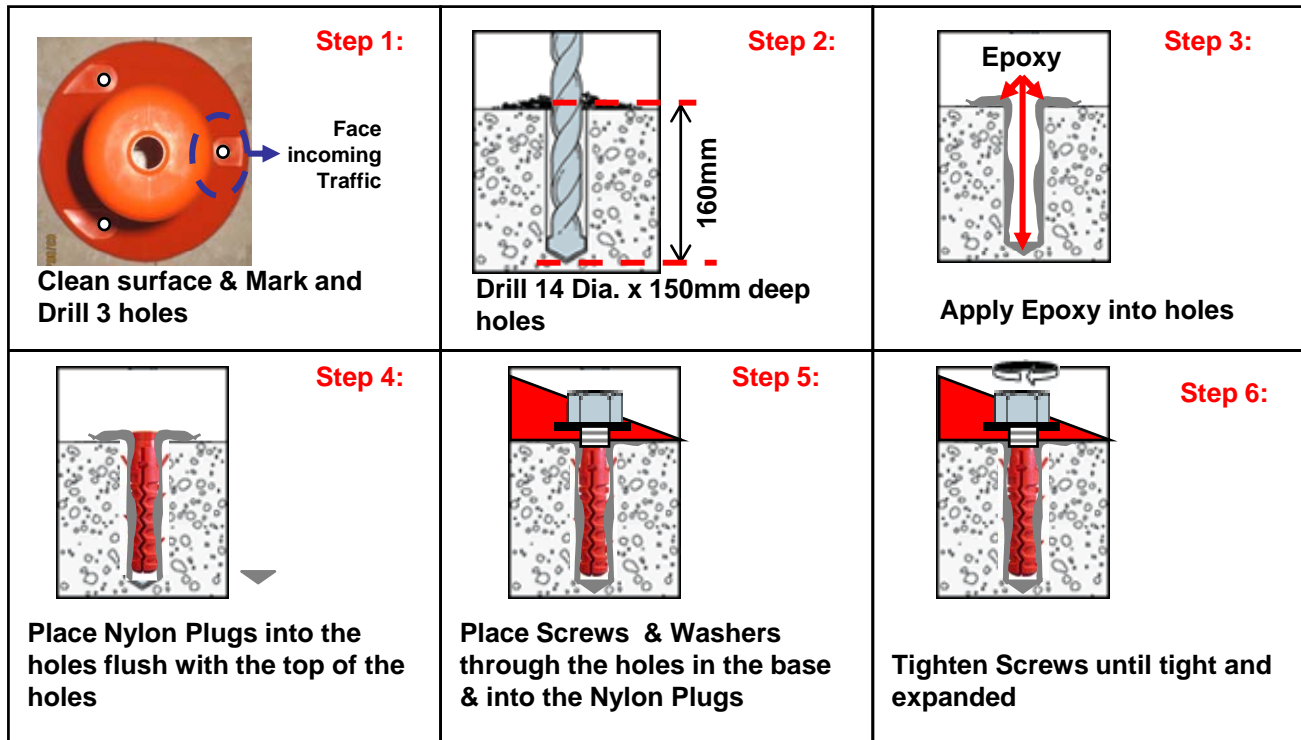

To install Lane-Flex Post

Step 1:

- Clean the surface of dirt and moisture
- Place Post with the Standard Hole facing traffic.
- Make sure ground surface is flat, then align the Post until it is satisfactory and vertical to the ground
- Mark the 3 holes

Step 2:

- Drill the holes with a 14mm masonry bit to a depth of 160mm
- Clear/clean (blow) the holes & surface of oil, grease & dirt (e.g. Wire Brush) for adhesion of the Epoxy.

Step 3:

- Prepare the Epoxy and apply onto the side of the holes and into the holes
- Apply Epoxy on the underside of the base of the Post, particularly around the Holes.

Step 4:

- Insert 14mm x 65mm Nylon Plugs into the holes and ensure that it is flush with the top of the hole.

Step 5:

- Place the 150 x 10mm Coach Screws into the holes of the Base with a 25mm OD Washer and into the Nylon Plugs..

Step 6:

- Tighten the Screws until expanded and tight and before the Epoxy is cured.

We recommend wearing safety goggles, gloves and hearing protection while installing posts.